


1. Crankarm with through-hole

Make sure that the crankarm has a bushing with a through-hole for mounting the pedals, allowing the spindle to exit through the crankarm.

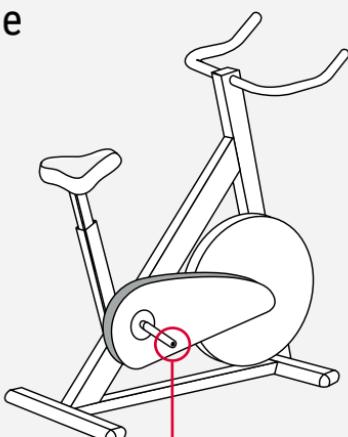


2. 9/16" Thread compatibility

Check the compatibility of the 9/16" thread on the cranks.

Assioma PRO has the same type of thread as the Look® or Shimano® pedals.

If you already have a pedal of one of the above-mentioned brands, it is recommended to try mounting them to verify their compatibility.

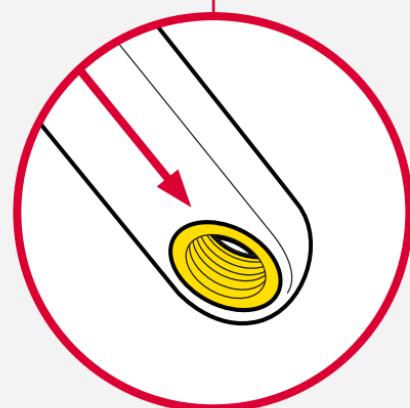

3. Check the distances

- Before purchasing the product, make sure that the distance between the outer end of the crankarm and the Spin Bike's chain guard is greater than 20mm.
- If you already have Assioma PRO, verify that the pedal cap is at a distance greater than 4mm from the Spin Bike's lateral chain guards.

